


I/S View of panel w/
lock removed

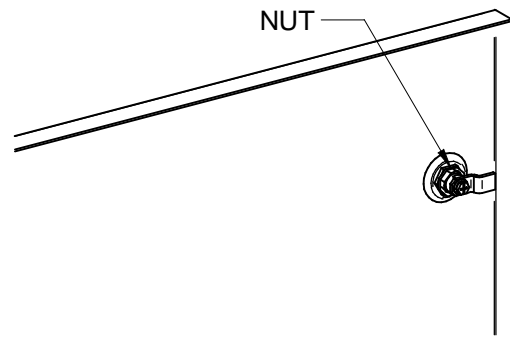

I/S View of panel w/
lock installed

INSTRUCTIONS FOR REMOVING LOCK:

- A) Remove quarter turn locks by unfastening the nut.
- B) Slide the lock through the cutout in the panel, as shown.

INSTRUCTIONS FOR INSTALLING LOCK:

- A) Install quarter turn keyed locks by inserting the lock, without nut, through the panel.
- B) Then fastening the nut on the I/S as shown.
- C) Note: When installing the lock, ensure the cam is in the proper location for locking and unlocking the panel.

TOOL BOX



3/4 Open End
Wrench

