
DC4RPR


ASSEMBLY INSTRUCTIONS FOR 4 POST RELAY RACK ADJ. RAILS

BUL10396 REV. C

PAGE 1 OF 1

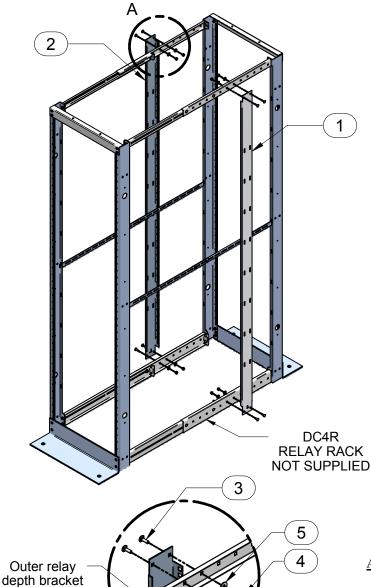

WHEN MOUNTING TO INNER RELAY RACK DEPTH BRACKET

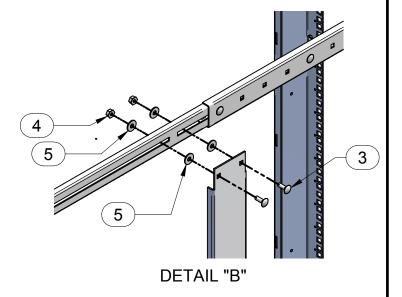

DETAIL A

PARTS LIST	
DESCRIPTION	QTY
DC4RPR - L.H. Adjustable Rail	1
DC4RPR - R.H. Adjustable Rail	1
1/4-20 X 3/4 Carrage Bolt	8
1/4-20 Kep Nut	8
Washer	16
	DESCRIPTION DC4RPR - L.H. Adjustable Rail DC4RPR - R.H. Adjustable Rail 1/4-20 X 3/4 Carrage Bolt 1/4-20 Kep Nut

TOOL BOX

7/16 Socket Driver

ASSEMBLY INSTRUCTIONS:

- A) Attach adjustable rails (Item 1 & 2) at desired location on each outer relay rack depth bracket using the supplied hardware (Item 3, 4 & 5). Do not tighten bolts completely until all 4 bolts are installed (See Detail A).
- B) If rails are to be installed on inner relay rack depth bracket, insert a washer (Item 5) between the rail and inner relay depth bracket (See Detail B).
- C) Tighten all hardware.



visit our website @ www.hammondmfg.com