

BUL10425 REV. E


PAGE 1 OF 7

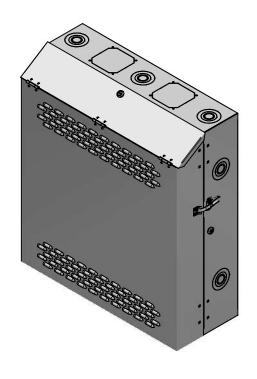


PARTS LIST

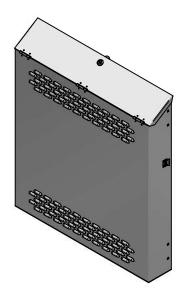

FRONT SECTION 1:14

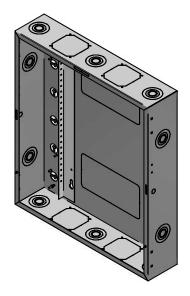

REAR SECTION 1:14

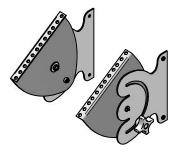

MOUNTING RAILS 1:8





visit our website: www.hammondmfg.com visitez notre site Web:

INSTRUCTIONS FOR NETWORK LOCKBOX

BUL10425 REV. E

PAGE 2 OF 7

IMPORTANT SAFETY CAUTIONS

NOTE: Read all instructions before installing and using the product.



Installation and assembly must be performed by qualified personnel.



Ensure that the floor/wall structure is able to withstand the weight of the cabinet while fully loaded.



Route all chords and cables away from moving parts and all possible pinch points.



Ensure unit is plumb and level for proper operation.



Always fully mount and secure enclosure or rack system before loading equipment.



Evenly distribute all mounted loads and equipment to ensure stability within the system.



To reduce risk of personal injury and product damage always ensure a a sufficient amount of personnel are present when loading, unloading, and moving the enclosure or rack system.



The following parts are not effectively bonded to the Protective Earth Terminal (PET): Front Section and Door. If any part needs to be bonded to the PET it shall be done in accordance with Article 250 of the National Electric Code.

LOADING RACK SYSTEM

NOTE: When loading equipment into the enclosure or rack system ensure weight is distributed so that heavier loads are placed towards the bottom of the rack to avoid unstable conditions.

Maximum Weight Capacity: 150 lb





HLP - SERIES


INSTRUCTIONS FOR NETWORK LOCKBOX

BUL10425 REV. E

PAGE 3 OF 7

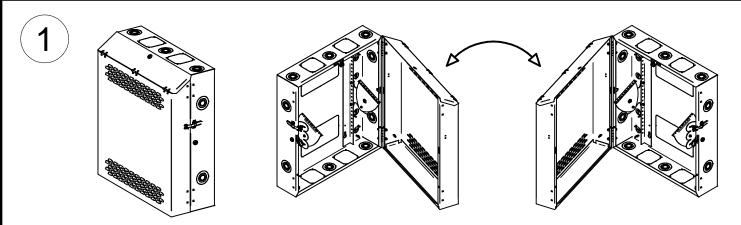

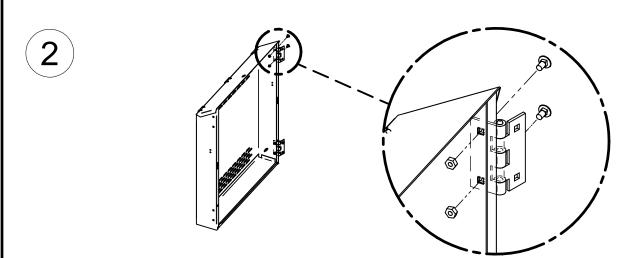

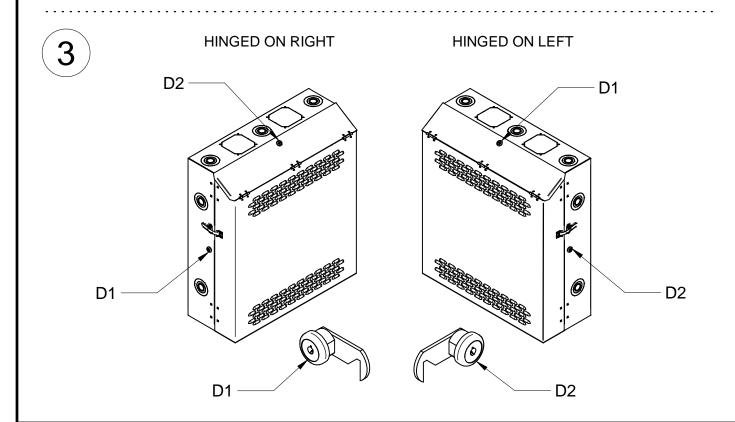





HLP - SERIES

INSTRUCTIONS FOR NETWORK LOCKBOX

BUL10425 REV. E

PAGE 4 OF 7

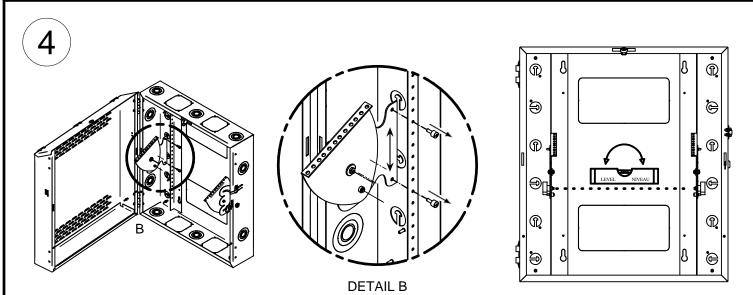

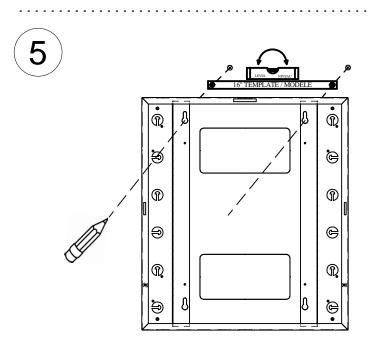


ENGLISH

Different wall materials require different types of screws. Choose screws that are suitable for use in your wall.

FRANÇAIS

Différents matériaux de mur requière différents types de vis. Choisir les vis appropriées à votre mur.

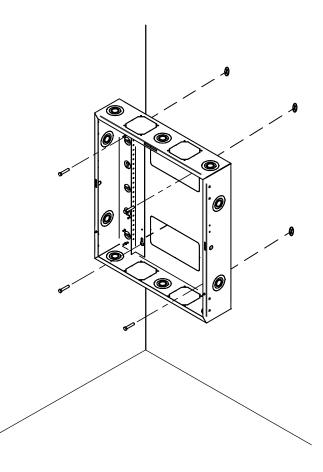




BUL10425 REV. **E**

PAGE 5 OF 7

GROUNDING AND BONDING INSTRUCTIONS

(1)

Included within optional grounding kit (GRDKIT01):

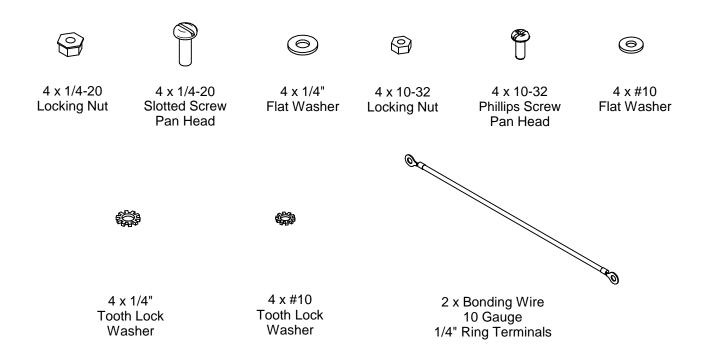

NOTE: PROTECTIVE EARTH TERMINALS (PET) ARE LABELLED WITH THE PROPER SYMBOL SHOWN IN FIGURE 1 AND ARE THE ONLY TERMINALS TO WHICH THE PROTECTIVE EARTH GROUND CONNECTION SHALL BE ATTACHED TO.



NOTE: ALL PROTECTIVE EARTH AND BONDING CONNECTIONS SHALL BE IN ACCORDANCE WITH ARTICLE 250 OF THE NATIONAL ELECTRIC CODE.



HLP - SERIES

INSTRUCTIONS FOR NETWORK LOCKBOX

BUL10425 REV. E

PAGE 6 OF 7

2

Main Protective Grounding

When grounding the rack system or enclosure it is essential that the main protective ground is connected and secured first with its own nut before any bonding connections are made on top. (Figure 2)

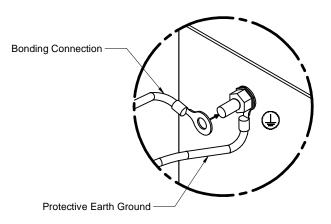



Figure 2


3

Bonding Instructions

<u>Front Section</u>: Attach bonding wire found in ground kit to a front section bonding stud, closest to the hinged side of the enclosure, using the ring terminal and hardware provided. Attach opposite end of wire to the nearest PET on the rear section.

<u>Door</u>: Attach bonding wire to the door stud using the same method described previously. Attach the opposite end to the nearest front section bonding stud.

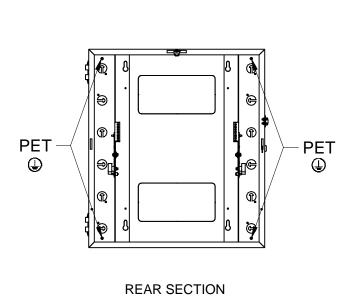

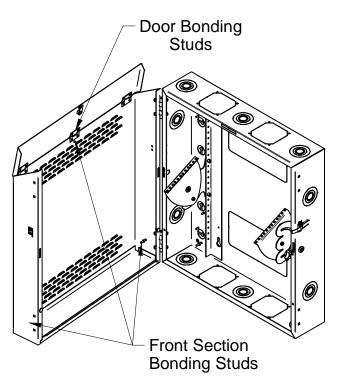





BUL10425 REV. E

PAGE 7 OF 7

KNOCK-OUTS AND CABLE WAYS

- Knock-outs are located on the top/bottom and sides of the rear section.
- The openings allow for cable entry, mounting of conduits, and fan mounting.

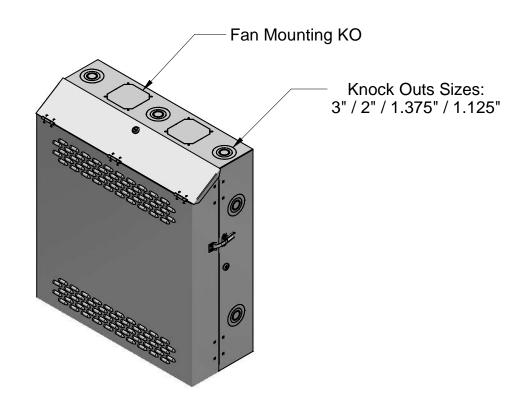

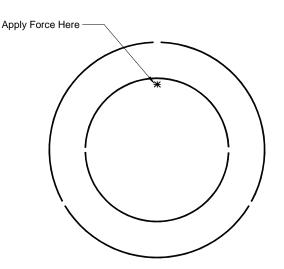

Proper Removal of Knock-Outs

When removing an inner knock-out with the intent to leave the larger in tact ensure the force is applied to the weakest area of the ring.

This is accomplished by placing the knock-out tool as far away from the tabs as possible while remaining as close to the tab of the next largest ring (shown to the left).

