

GASKET REPLACEMENT INSTRUCTIONS FOR HYJ, HYMPB AND HYPB SERIES

1110) 111111 2 111 (2 1111 2 0211220		
PARTS LIST		
PART#	HEIGHT	WIDTH
HYG1613	15.176	12.177
HYG1411	13.176	10.177
HYG129	11.176	8.177
HYG125	11.176	4.177
HYG107	9.176	6.177
HYG105	9.176	4.177
HYG85	7.176	4.177

Mounting kits are required to maintain marked Type rating.		
	Part No.	DESCRIPTION
	ST1MFSS316	1" STAND-OFF
	ST2MFSS316	2" STAND-OFF
	ST4MFSS316	4" STAND-OFF
	ST6MFSS316	6" STAND-OFF
Ľ		

Gasket replacing/cleaning procedure

- 1. Wipe down enclosure. Ensure enclosure is completely dry prior to removing cover.
- 2. Loosen screws.
- 3. Remove cover.
- 4. Wipe off remaining water droplets.
- 5. Carefully remove gasket.
- 6. Clean gasket and cover.
- 7. Ensure gasket and cover are completely dry before (re)install.
- 8. Place gasket firmly into cover around retainer by manually pressing down along all gasket surfaces to ensure gasket is seated in place.
- 9. Align cover to enclosure.
- 10. Tighten 10-32 screws by hand.
- 11. Ensure gasket is properly sealed and sitting flush on enclosure.
- 12. Torque 10-32 screws to 15 in/lbs.





