


CGK125 SERIES

BUL10288

REV. B

ASSEMBLY INSTRUCTIONS FOR CGK125 - GROUND HARDWARE KIT

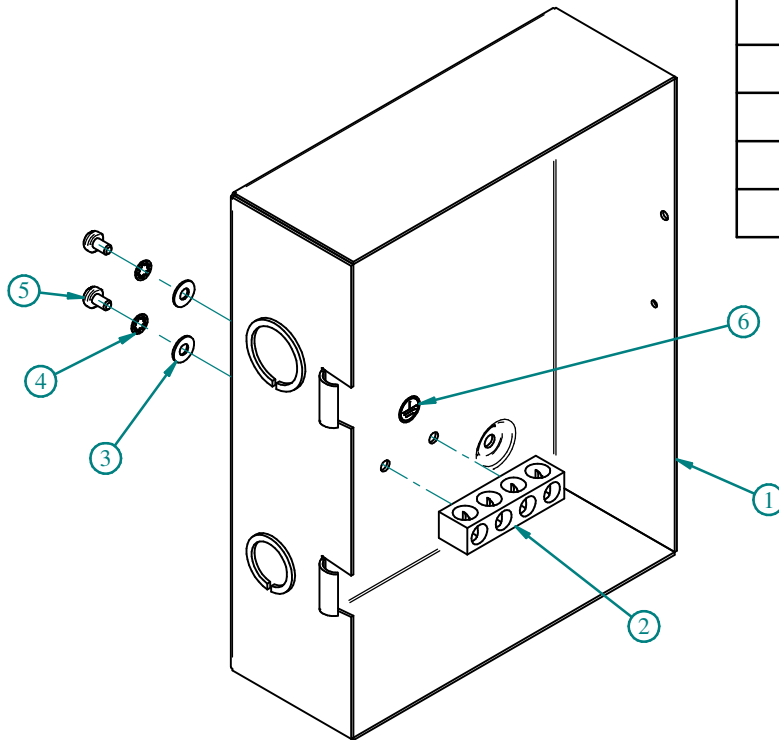


EXPLODED - ISOMETRIC VIEW

ITEM #	DESCRIPTION	QTY.
1	ENCLOSURE - BODY	1
2	GROUND LUG - 2/0-14 X (4) AL/CU	1
3	WASHER FLAT #10 ZP SAE	2
4	WASHER #10 ZP INTERNAL STAR	2
5	SCREW - 10-32X5/16 PH/SL PAN TYPE F ZP	2
6	GRD. SYMBOL LABEL	1

ASSEMBLY INSTRUCTIONS

- Locate lug in desired location.
- Measure, mark, and drill body as per drilling detail.
Drill (2) 0.218 (6mm) dia. holes
- Remove paint from around 0.218 (6mm) dia. holes
to allow for proper conductivity.
- Install lugs using 10-32 hardware as shown in the
ISOMETRIC VIEW.
- Install grounding label as shown. (ITEM #6)

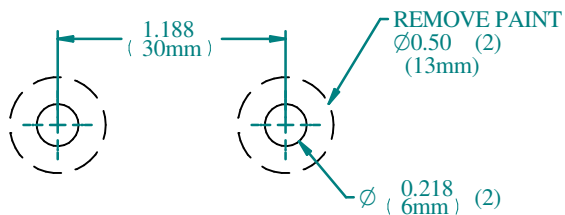

DRILLING DETAIL

(NOT TO SCALE)

VIEWED FROM BACK OF ENCLOSURE

**HAMMOND
MANUFACTURING™**
ENCLOSURES
www.hammondmfg.com

TOOL BOX



Tape Measure




Centre Punch



Hammer



Drill, use 0.218 (6mm)



Slot Head Screw Driver

