

METERING CABINET

BUL10296


REV. A

ASSEMBLY INSTRUCTIONS FOR METERING CABINETS (CMC)

INSTRUCTIONS :

- A) LOCATE METERING CABINET IN DESIRED LOCATION.
- B) HOLD CABINET IN LOCATION AND SECURE USING SUPPLIED FASTENERS.
- C) INSTALL TRANSFORMER OR METERING EQUIPMENT ONLY.
- D) ENSURE THAT LOCKOUT SCREWS ARE INSTALLED WHILE IN USE (ONLY ON DOUBLE DOOR VERSIONS).
- E) OMIT ITEMS 1,2, & 6 WITH SINGLE DOOR VERSIONS.
- F) SLIP HINGES ARE REPLACED WITH HEAVY-BUTT HINGE ON SINGLE DOOR VERSIONS.



ITEM #	DESCRIPTION
1	SLOTTED 1/4 TURN FASTENER -BLK
2	SCREW - 10-32 X 1/2 PAN PH ZP - THREAD ROLLING
3	SLIP HINGE
4	METERING CABINET
5	COVER PLATE
6	SCREW 8 X 3/8 PAN PH

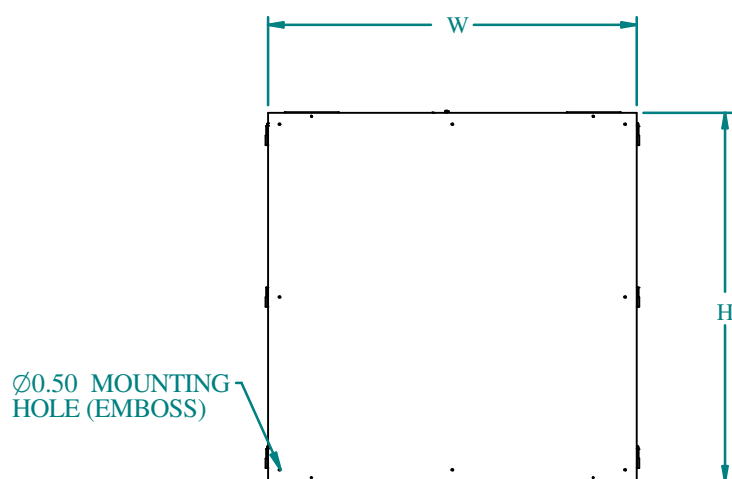

REAR VIEW

PART NUMBER	H	W	# OF MTG. SCREWS
CMC202010	20.00	20.00	4
CMC271310	27.00	13.00	4
CMC302010	30.00	20.00	4
CMC303010	30.00	30.00	4
CMC363612	36.00	36.00	4
CMC484812	48.00	48.00	8

PART SHOWN -

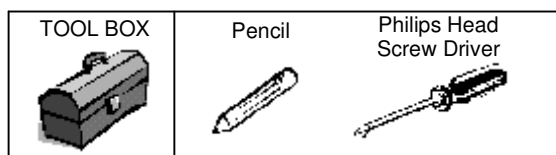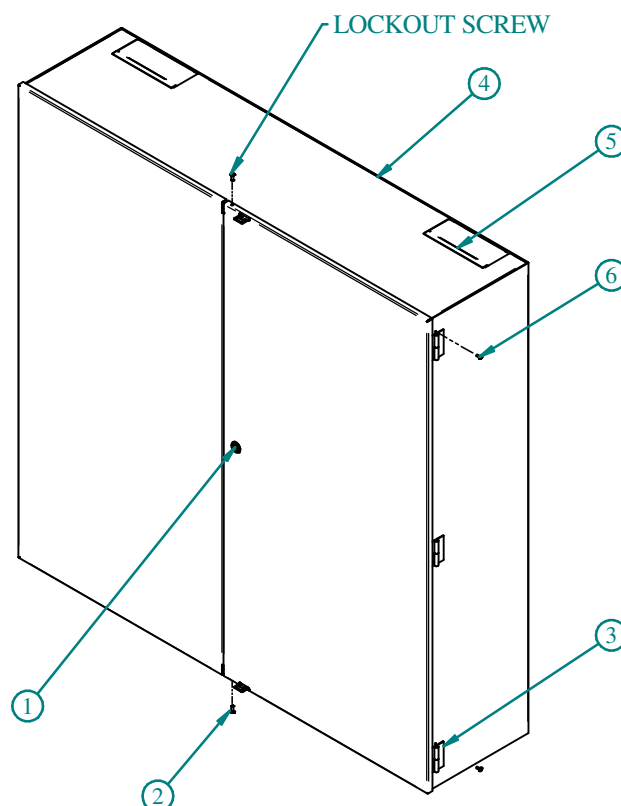

**HAMMOND
MANUFACTURING™
ENCLOSURES**