




### PARTS LIST

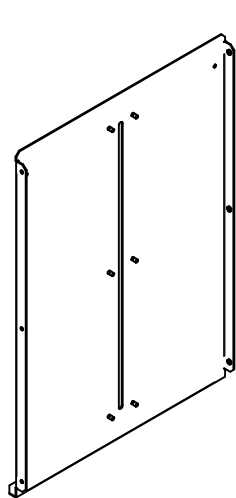


ITEM 1  
INNER CHIMNEY PANEL  
QTY 2

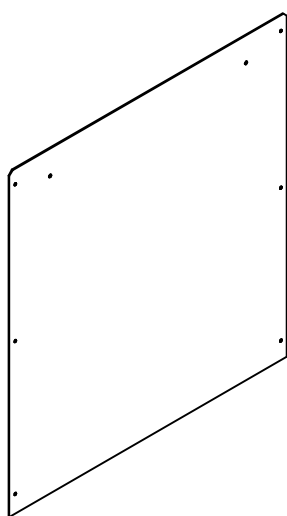

ITEM 2  
INNER CHIMNEY BOLT ON PANEL  
QTY 2

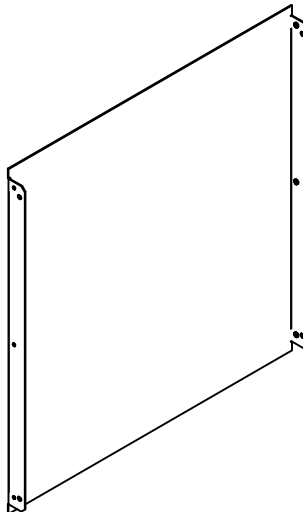

ITEM 3  
OUTER CHIMNEY PANEL  
QTY 2

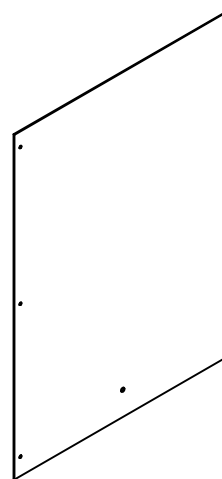


ITEM 4  
OUTER CHIMNEY BOLT ON PANEL  
QTY 2



ITEM 5  
COVER PLATE  
QTY 2




ITEM 6  
SCREW 6-32 X 1/4"  
QTY 24

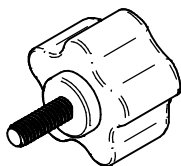

ITEM 7  
KNOB 1/4-20 FIVE ARM  
QTY 2



ITEM 8  
TOP CHIMNEY GASKET  
QTY 2X (15.75")  
2X (20.875")



ITEM 9  
MID CHIMNEY GASKET  
QTY 2X (15.75")  
2X (20.875")



ITEM 10  
NYLON PLUG/GUIDE  
QTY 8



ITEM 11  
FASTENER KNOB  
QTY 4



ITEM 12  
FASTENER BASE  
QTY 4




ITEM 13  
10-32 KEP NUT  
QTY 12



ITEM 14  
1/4-20 LOCK NUT  
QTY 2



ITEM 15  
1/4-20 WELD NUT  
QTY 2

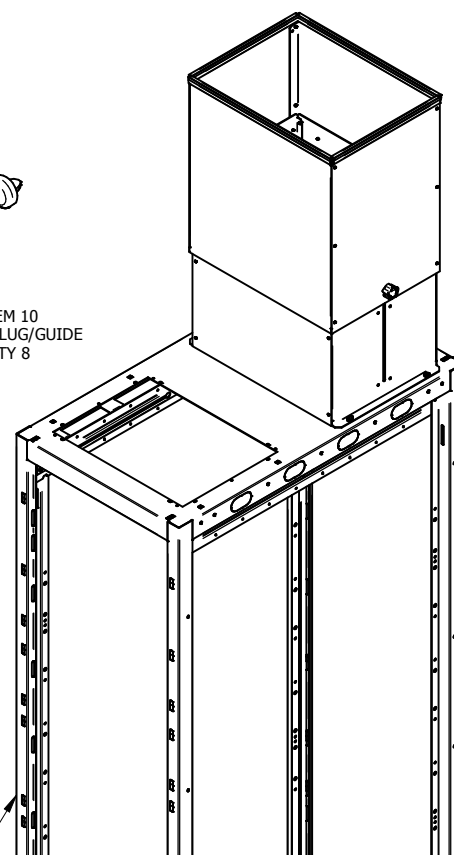

HAMMOND FRAME  
NOT INCLUDED

**\*\*CAREFULLY READ ALL INSURCTIONS  
AND NOTES\*\***

#### TOOLBOX



Phillips  
Screw Driver



3/8 Socket  
Driver




7/16 Socket  
Driver




**HAMMOND  
MANUFACTURING™**  
ELECTRONICS GROUP


visit our website @ [www.hammondmfg.com](http://www.hammondmfg.com)

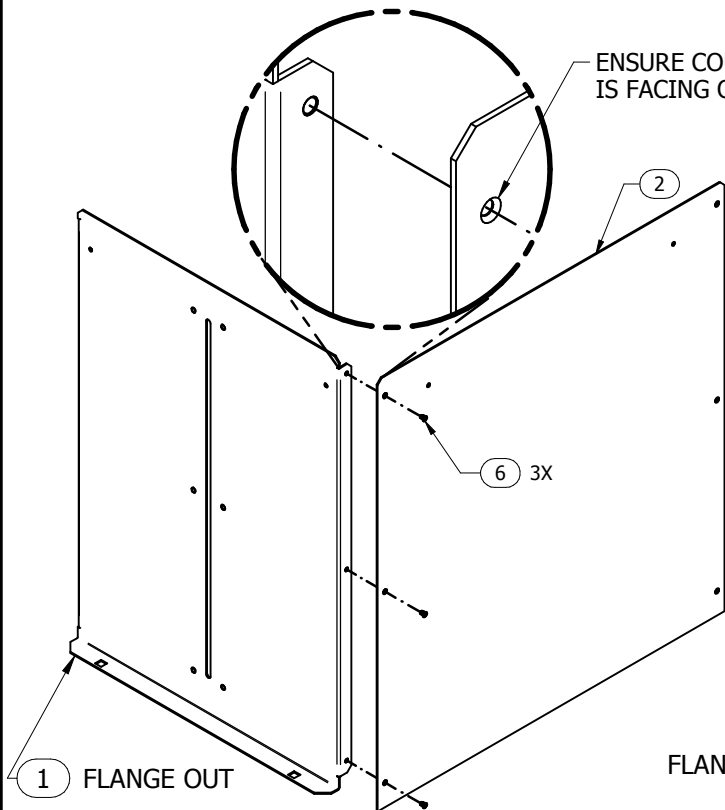


**STEP 1 - INNER CHIMNEY ASSEMBLY**

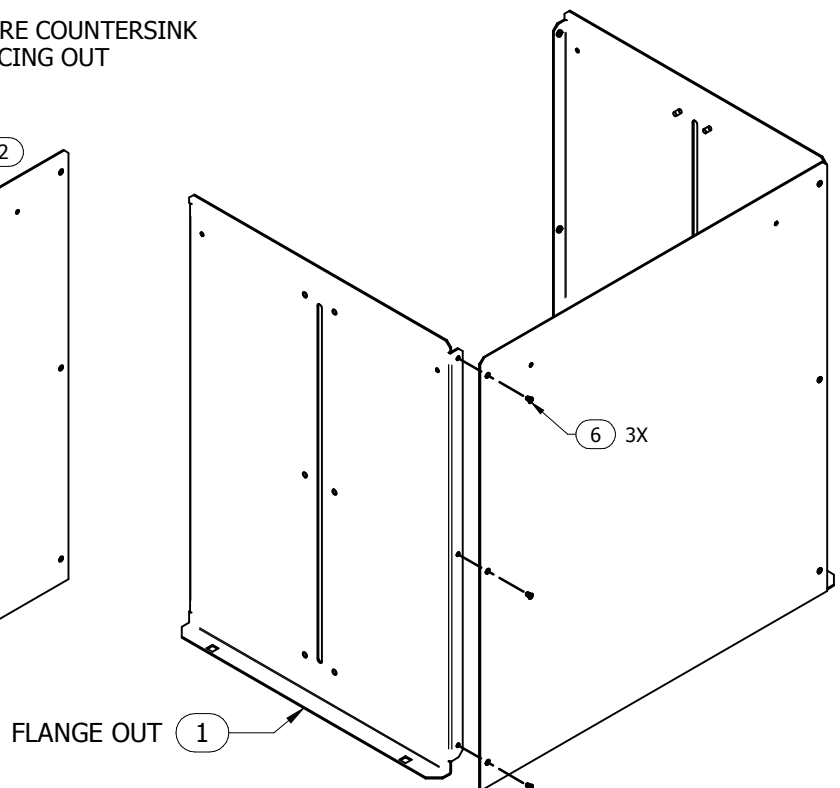

**STEP 2 - INNER CHIMNEY ASSEMBLY**

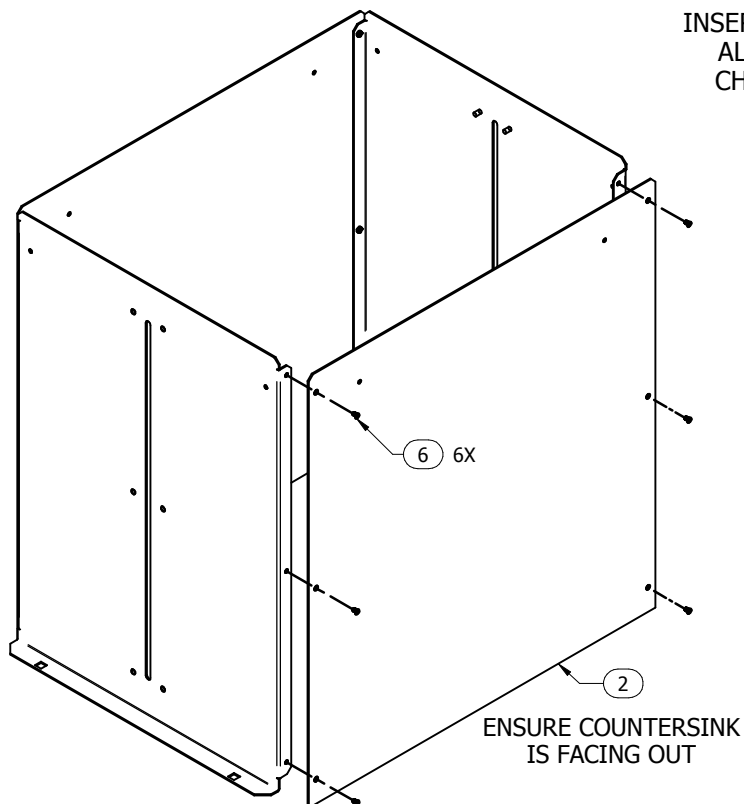


**STEP 3 - INNER CHIMNEY ASSEMBLY**

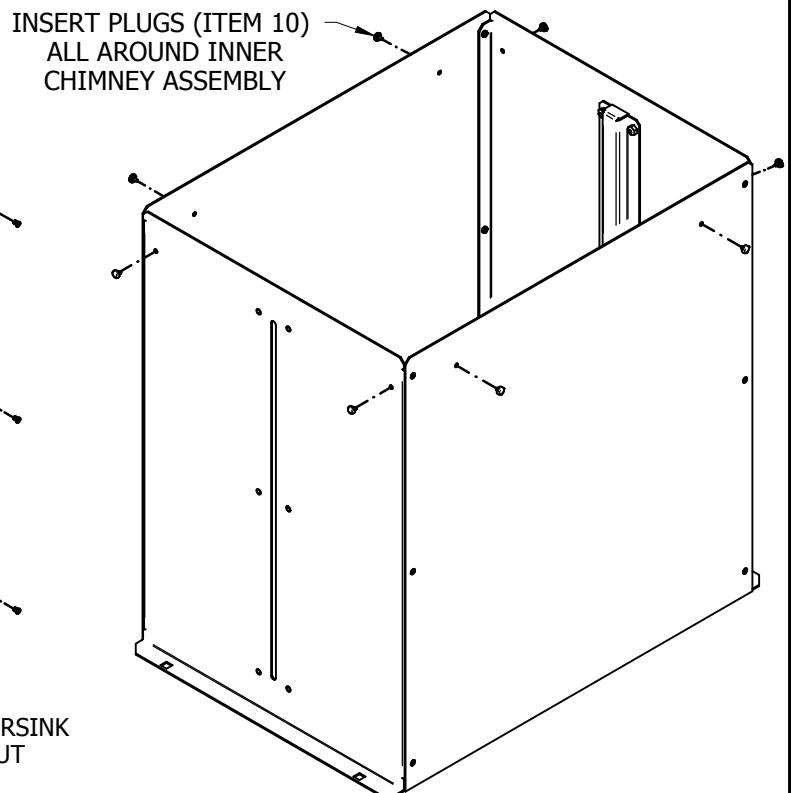


**STEP 4 - INSTAL GUIDE PLUGS**




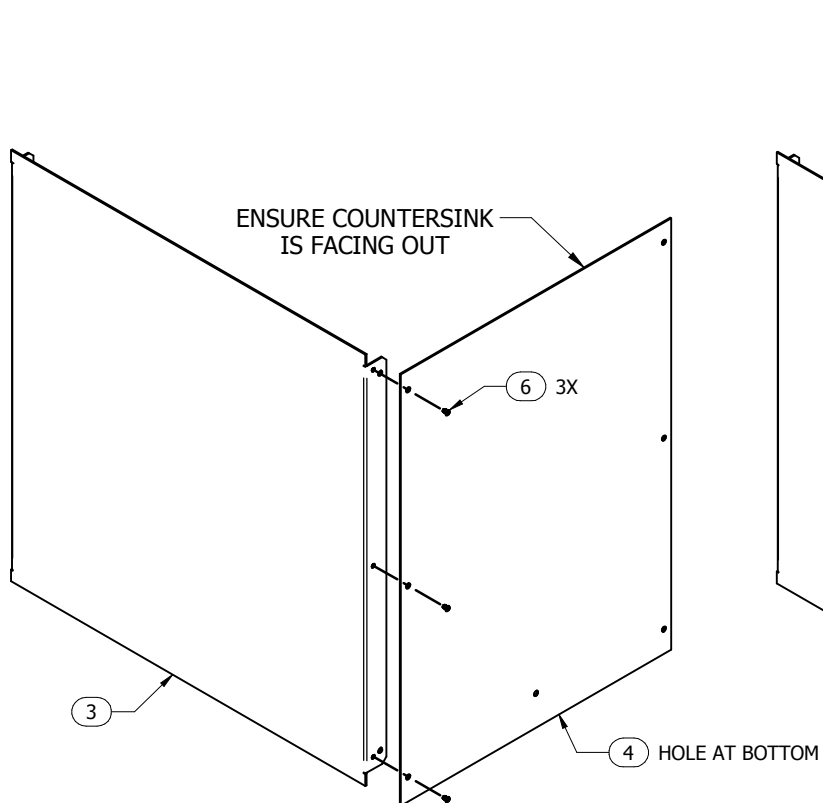

**STEP 5 - OUTER CHIMNEY ASSEMBLY**

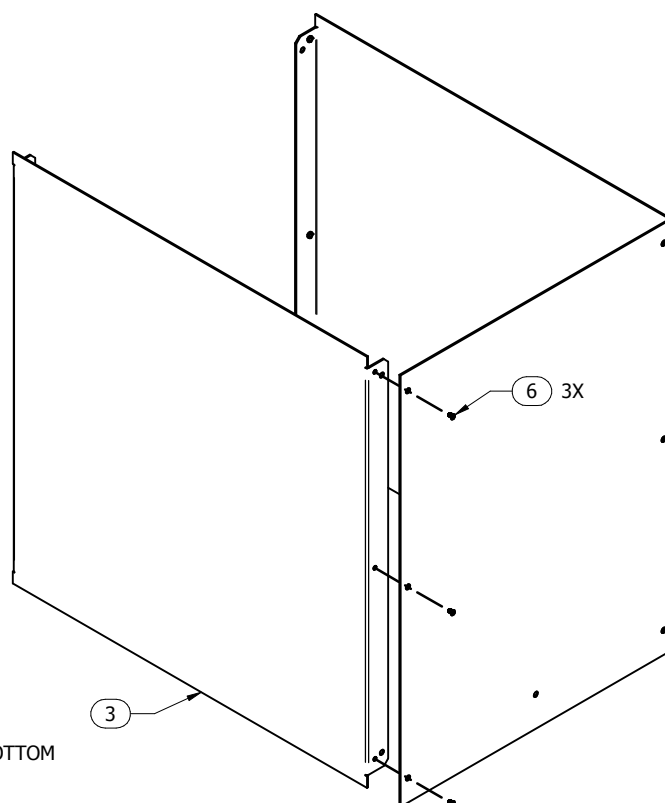

**STEP 6 - OUTER CHIMNEY ASSEMBLY**

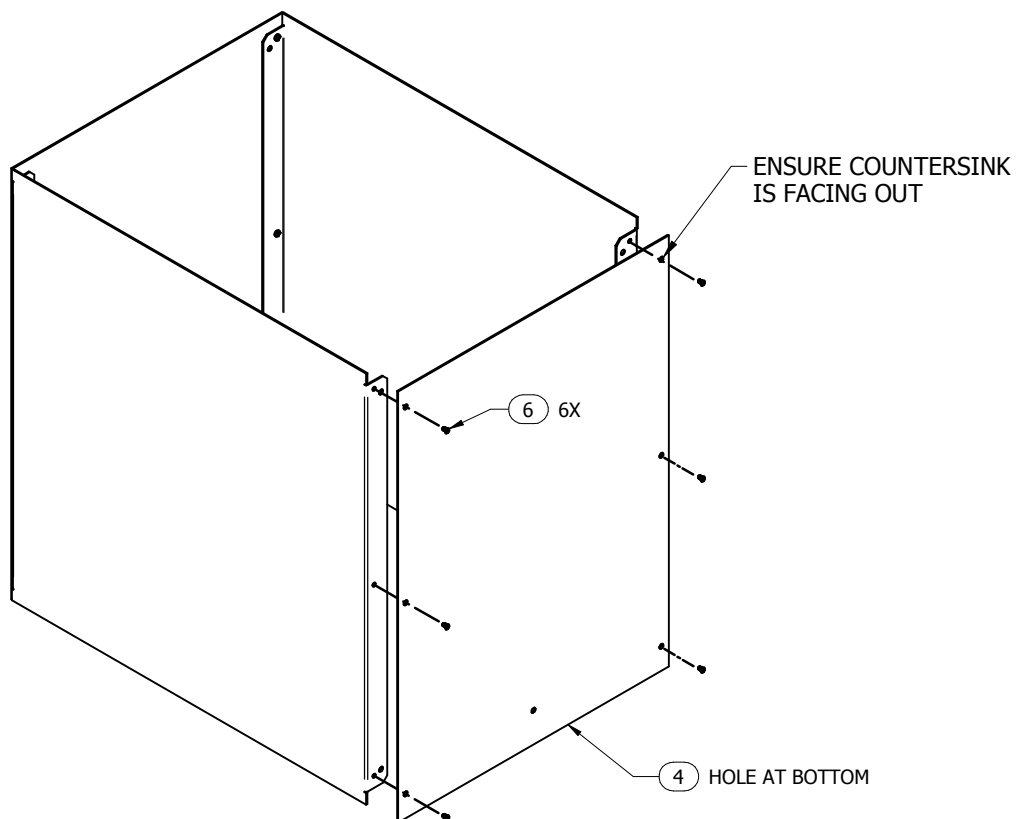

**STEP 7 - OUTER CHIMNEY ASSEMBLY**



### STEP 8 GASKET INSTALLATION

AS SHOWN:



Outer Chimney Assembly

8 15.75"

**Firmly Press Gasket Over Outer Chimney**


**\*\*GASKET INSIDE\*\***  
Align Gasket with bottom of chimney panels

**\*\*ENSURE hole is toward bottom\*\***

### STEP 9 CHIMNEY ASSEMBLY

Slide Outer Chimney Carefully Over Inner Chimney

Inner Chimney Assembly

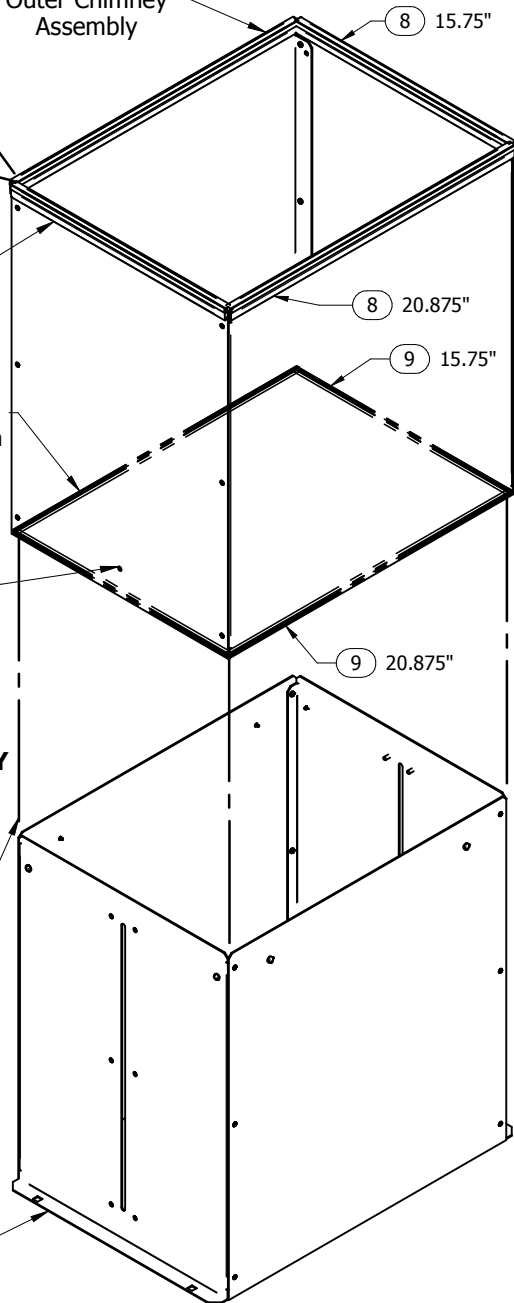


### STEP 10 INSTALLING CLAMPING SYSTEM (BOTH SIDES)


**\*\*SEE STEP 10 FOR MORE DETAIL\*\***

**\*\*Insert knob from outside of chimney.**  
Hand tighten weld nut, then tighten nylon nut so it is flush with end of knob.\*\*

DETAIL A

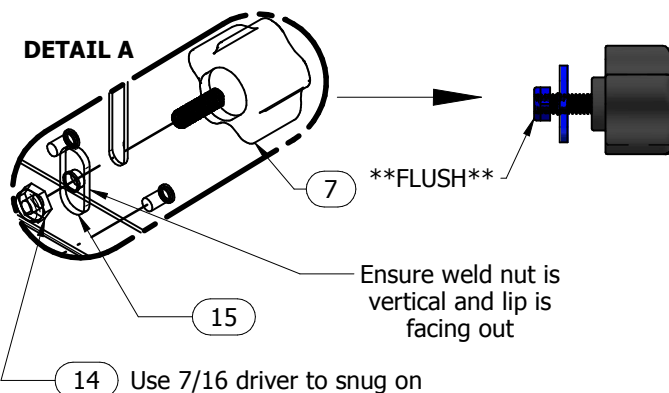

### STEP 11 INSTALLING COVER PLATE (BOTH SIDES)

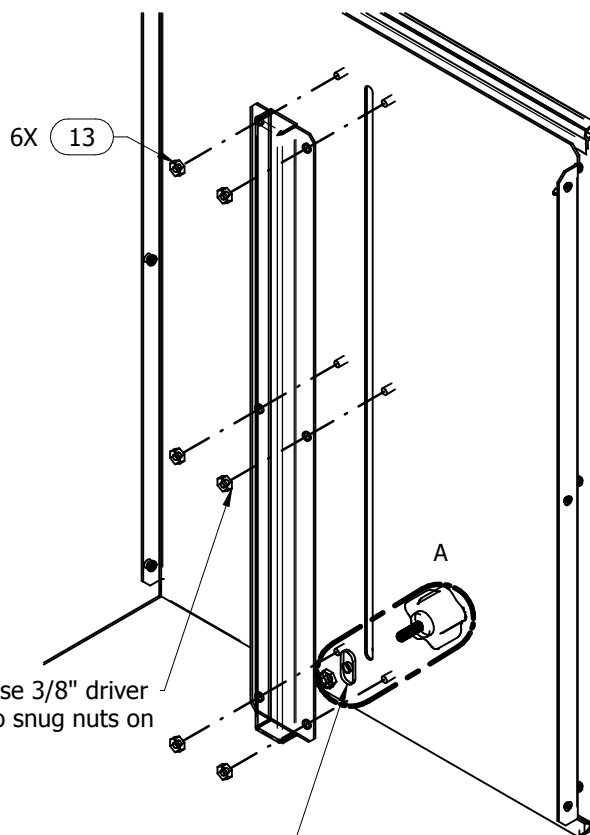



Use 3/8" driver to snug nuts on

ENSURE WELD NUT IS VERTICAL WHEN INSTALLING COVER PLATE



### STEP 12 INSTALL FASTENER BASE TYPICAL EACH CORNER

NOTE:  
INSTALL FASTENER BASE PRIOR TO  
INSTALLATION ON CABINET

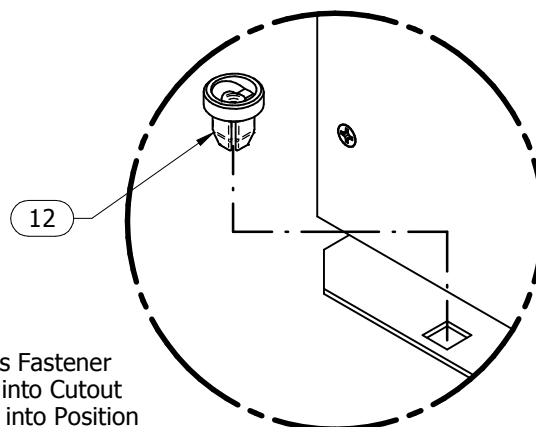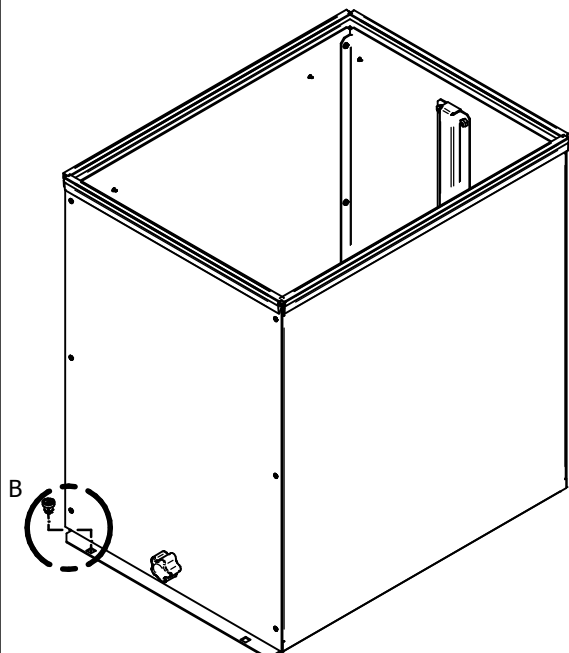


Press Fastener  
Base into Cutout  
to lock into Position


DETAIL B

### STEP 13 ATTACH CHIMNEY TO CABINET

ALIGN CHIMNEY WITH HOLES ON TOP OF  
CABINET  
FASTEN USING ITEM 11 FROM OUTSIDE CABINET  
(SEE DETAIL A)

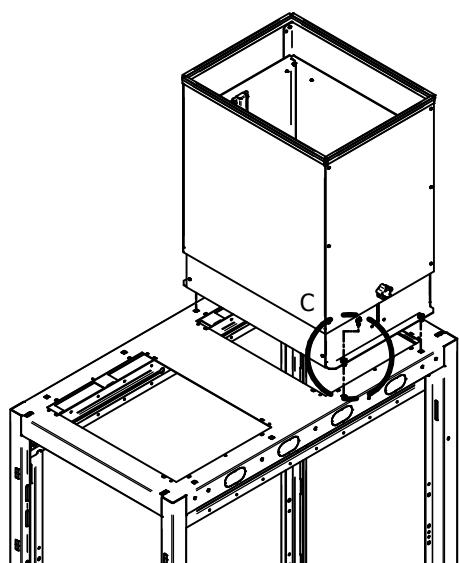

Insert Fastener Knob into  
Fastener Base and Twist  
to Seat and Lock

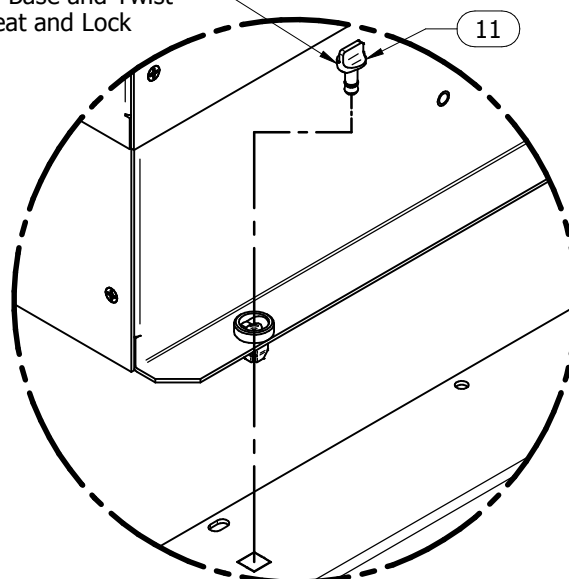

DETAIL C  
TYPICAL EACH CORNER

NOTE  
To Remove Chimney from Cabinet  
Twist Fastener Knob 90° to Unlock

