


INSTRUCTIONS FOR REPLACING LOCK ON DC100 CABINET



REMOVE 2 SCREWS
AND RETAINING BOLT

****ENSURE TO
HOLD LOCK ROD
ASSEMBLY SO IT
DOES NOT FALL
WHEN REMOVING
HANDLE ASSEMBLY****

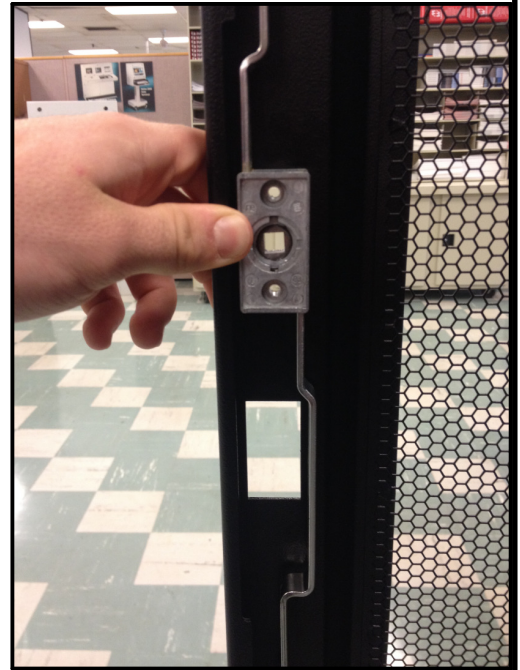


PUSH OUT PLASTIC
HANDLE ASSEMBLY

PUSH TOP OF HANDLE
ASSEMBLY OUT FIRST

PLACE BOTTOM OF NEW
HANDLE IN FIRST THEN PUSH
TOP INTO LOCK ROD ASSEMBLY

INSTALL 2 PROVIDED
SCREWS (RETAINING
BOLT NOT REQUIRED)

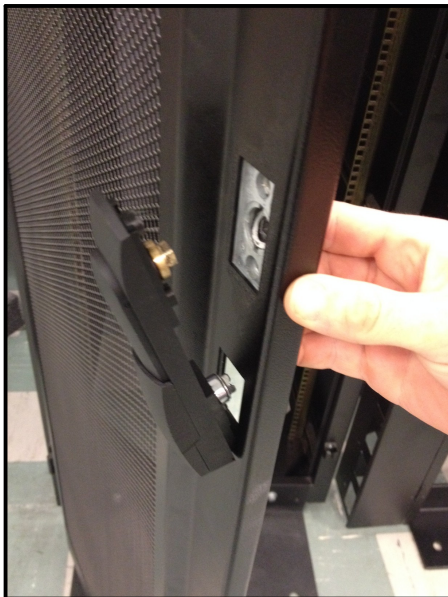

NOTE: Provided back plate is not needed on DC100

TOOL BOX



Phillips
Screw Driver




visit our website @ www.hammondmfg.com

INSTRUCTIONS FOR INSTALLING ON COLO CABINET



PLACE BOTTOM OF HANDLE IN
CUTOUT FIRST THEN PUSH AND HOLD
FLUSH WITH OUTSIDE OF DOOR

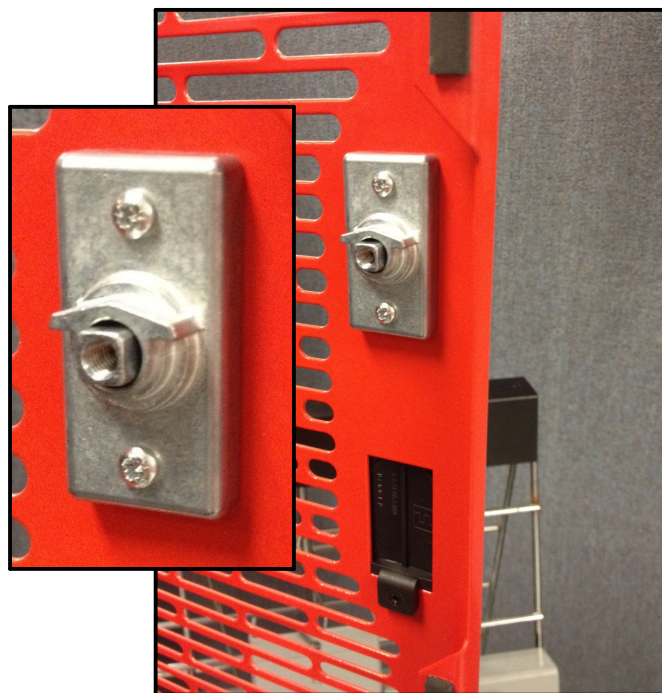

INSTALL BACK PLATE
WITH 'WINGS' TOWARDS
TOP (SEE PICTURE)
USE SUPPLIED SCREWS



INSTALL CAM WITH
BUMP TOWARDS INSIDE
OF LOCK HANDLE



USE PROVIDED RETAINING
BOLT TO SECURE CAM

