


1481L3R - LOUVER KIT


BUL86422
REV. D

ASSEMBLY INSTRUCTIONS FOR 1481L3R LOUVER KITS



PARTS LIST

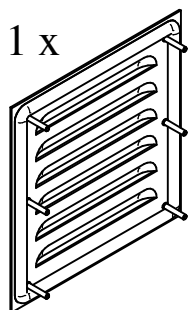


1 x
LOUVER PLATE (A)

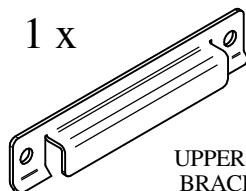


1 x
UPPER FILTER
BRACKET (B)

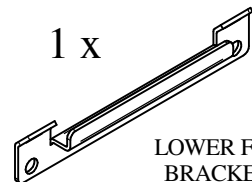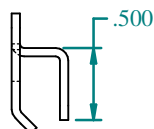

1 x
LOWER FILTER
BRACKET (C)

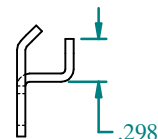


KEEPS NUT (D)
(QUANTITY BASED ON
NUMBER OF PLATE STUDS)

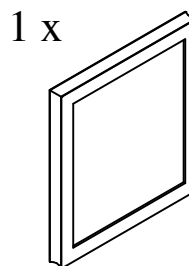


1 x
FILTER (E)

Step 1:
Select the cutout size appropriate to the louver kit being installed. Layout and cut
both the main opening and the mounting holes into the enclosure as seen below:

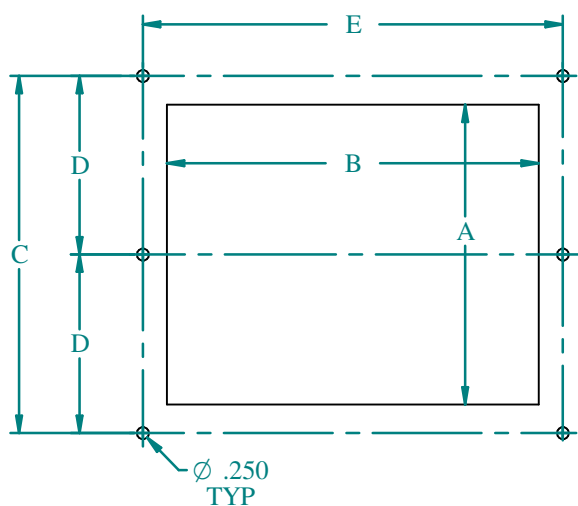

PART #	A	B	C	D	E
1481L3R55GY	3.00	2.75	4.00	N/A	3.75
1481L3R55SS	3.00	2.75	4.00	N/A	3.75
1481L3R56GY	2.88	3.75	3.75	N/A	4.75
1481L3R56SS	2.88	3.75	3.75	N/A	4.75
1481L3R66GY	4.00	3.75	4.87	N/A	4.75
1481L3R66SS	4.00	3.75	4.87	N/A	4.75
1481L3R68GY	3.50	5.75	4.87	N/A	6.75
1481L3R88GY	5.75	5.75	7.13	3.56	6.75
1481L3R610GY	3.75	7.75	5.06	N/A	8.75
1481L3R810GY	6.25	7.75	7.44	3.72	8.75
1481L3R1110GY	8.50	7.75	9.81	4.90	8.75
1481L3R1510GY	13.25	7.75	14.56	7.28	8.75

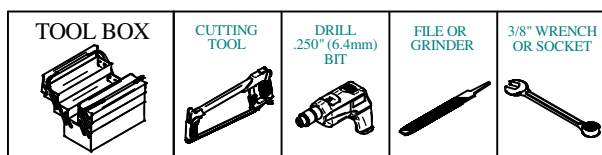

**HAMMOND
MANUFACTURING™**
www.hammondmfg.com

1481L3R - LOUVER KIT

BUL86422
REV. D

ASSEMBLY INSTRUCTIONS FOR 1481L3R LOUVER KITS

Step 2:

-Fit the louver plate (A) to the outside of the enclosure, exposing the mounting studs inside as shown in Figure 1

Step 3:

-Install the upper (B) and lower (C) filter brackets over the studs, and secure with the supplied kep nuts (D).

Step 4:

-Insert the top edge the filter (E) into the upper bracket first, then slide the filter down into the lower bracket as shown in Figure 2.

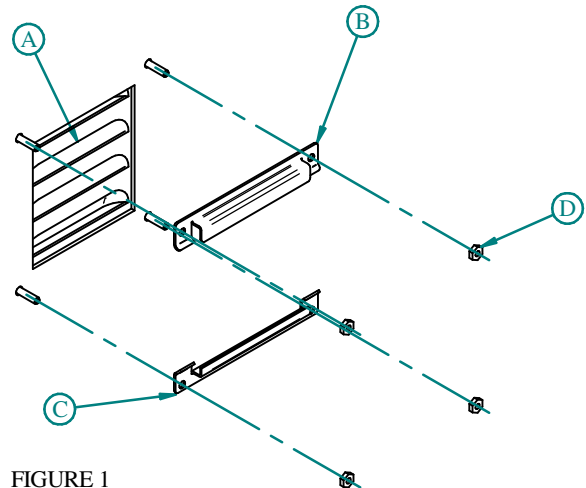


FIGURE 1


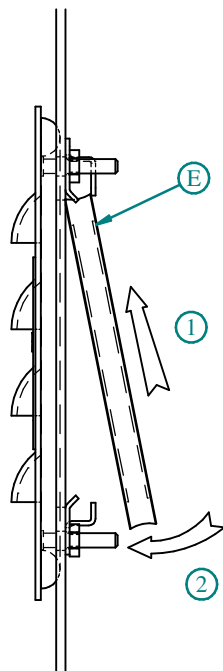


FIGURE 2

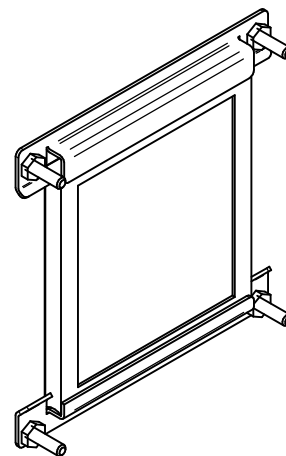

COMPLETED ASSEMBLY

TOOL BOX	CUTTING TOOL	DRILL .250" (6.4mm) BIT	FILE OR GRINDER	3/8" WRENCH OR SOCKET

**HAMMOND
MANUFACTURING™**
www.hammondmfg.com