
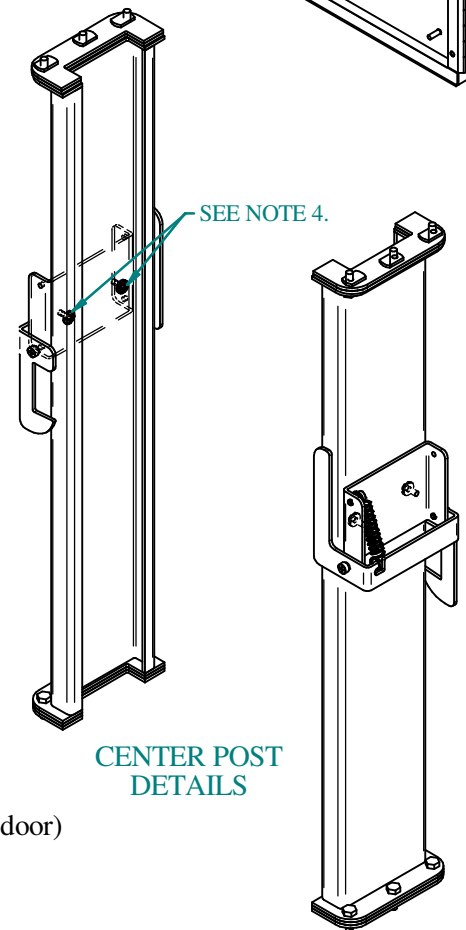
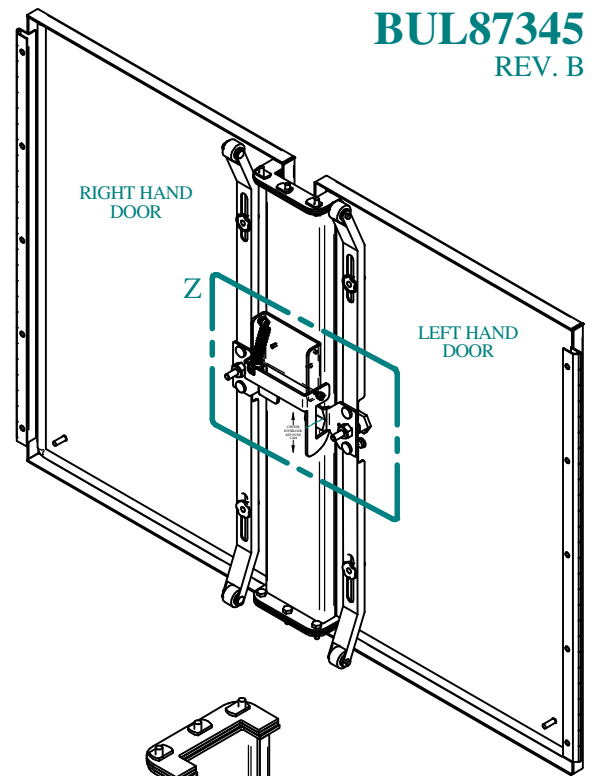


# MIKIT - SERIES

**BUL87345**  
REV. B


## ASSEMBLY INSTRUCTIONS FOR MECHANICAL INTERLOCK KIT

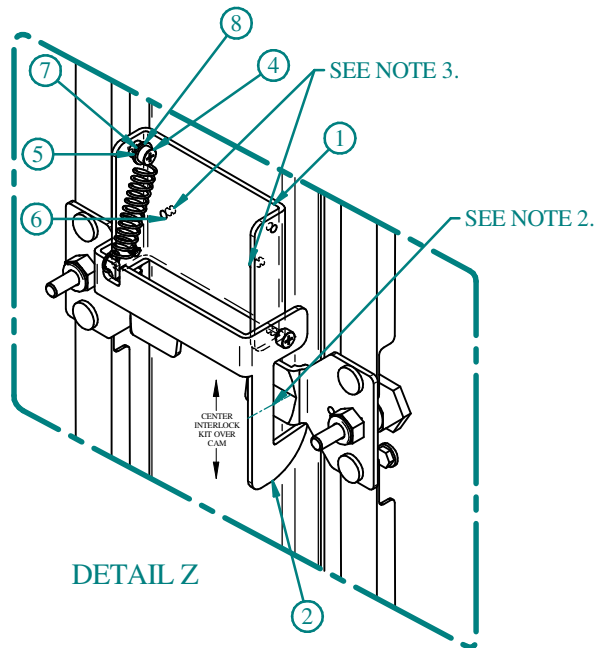

ITEM #	MIKIT PARTS LIST	QTY.
1	INTERLOCK, BASE	1
2	INTERLOCK BRACKET, SLAVE LH	1
3	INTERLOCK BRACKET SLAVE RH (NOT SHOWN)	1
4	10-32 SHOULDER SCREW	3
5	SPRING	1
6	10-32 SCREW	2
7	SEALING WASHER	2
8	NYLON BUSHING	1

### NOTES:

1. Confirm required orientation. (Installation instructions show left hand door as slave door)  
- Extra bracket provided can be used for right hand door as slave.
2. On back side of center post center interlock assembly over handle cam.
3. Mark hole locations then drill 2 clearance holes in center post (0.250" dia.) for mounting hardware.
4. Install 10-32 screws and sealing washer from outside as shown.

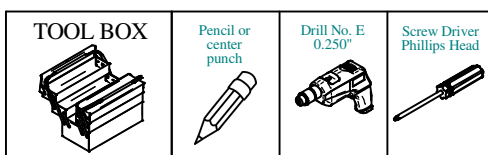

**HAMMOND  
MANUFACTURING™**  
[www.hammondmfg.com](http://www.hammondmfg.com)