
BARRIER KITS


ASSEMBLY INSTRUCTIONS FOR ALL BKFM AND BKWM SIZES

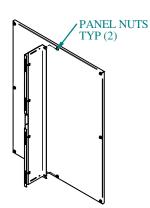

PARTS LIST			
ITEM	DESCRIPTION	QTY (42" & OVER)	QTY (36" & UNDER)
1	1/4 - 20 X 3/8" SCREW	6	4
2	1/4 - 20 X 1/2" SCREW	4	4
3	1/4 - 20 KEP NUT	6	6
4	ANGLE BRACKET	2	2
5	SEALING WASHER	4	4


- •LOOSEN PANEL NUTS AS SHOWN IN FIG. 1
- •SLIDE BARRIER BETWEEN WASHER AND BACK PANEL
- •VERTICALLY CENTRE BARRIER TO INNER PANEL
- •TIGHTEN PANEL NUTS.

FIG. 1






- •LOOSEN BARRIER SCREWS AS SHOWN IN FIG. 2
- •SLIDE BARRIER TOWARDS CENTRE POST
- •BREAK OFF CENTRE TAB IF REOUIRED
- •DO NOT TIGHTEN BARRIER SCREWS

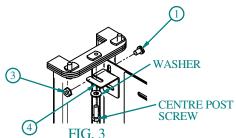

- •REMOVE CENTRE POST SCREW
- •RE-INTALL SCREW WITH WASHER (DO NOT TIGHTEN)
- •INSTALL BRACKET AS SHOWN FIG. 3
- •TIGHTEN CENTRE POST SCREWS
- •REPEAT FOR BOTTOM BRACKET

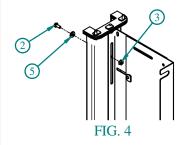

- •USE BARRIER AS TEMPLATE TO DRILL HOLES INTO CENTRE POST
- •DRILL ONE HOLE PER SLOT
- •INSTALL SCREW, SEALING WASHER AND NUT AS SHOWN IN FIG. 4
- •TIGHTEN BARRIER SCREWS FIG. 2





9/16 Open End Wrench



7/16 Open End Wrench

