




# HAMMOND MANUFACTURING®




## VERTICAL STRIP MOUNTING INSTRUCTIONS FOR SPRING CLIPS

STEP 1 - ATTACHED SPRING NUT TO RAIL BY  
INSERTING HORIZONTALLY THEN ROTATE 90°

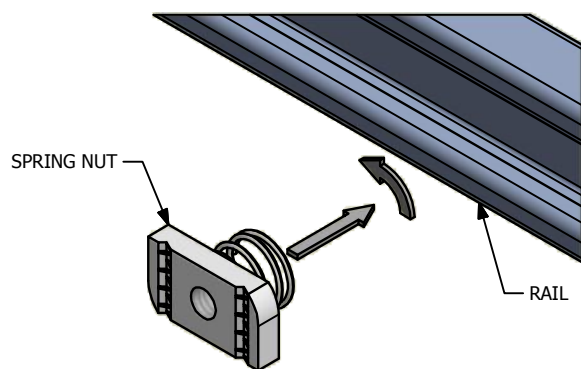

STEP 2 - ATTACHED THE CLIP WITH THE  
SUPPLIED BOLT AND WASHER TO SPRING NUT  
AND TIGHTEN IN PLACE.

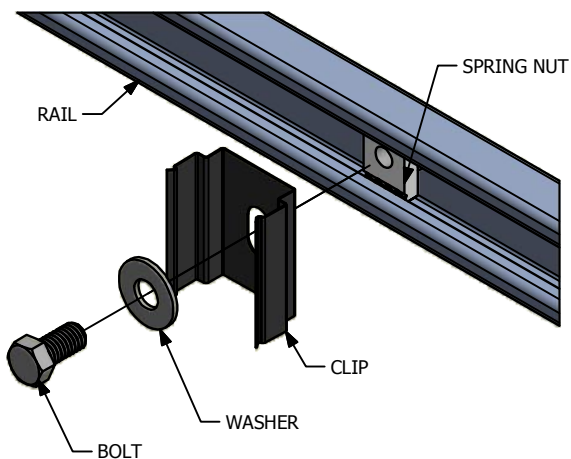

STEP 3 - WITH THE CLIP(S) INSTALLED ONTO  
THE RAIL(S) PRESS THE VERTICAL STRIP INTO  
THE CLIPS

