




# HAMMOND MANUFACTURING®




## VERTICAL STRIP MOUNTING INSTRUCTIONS FOR CLIPS ONTO SURFACES

STEP 1 - DRILL 1/8" PILOT HOLE IN LOCATIONS WHERE SPRING CLIPS WILL BE MOUNTED TO SURFACE FOR THE VERTICAL STRIP.

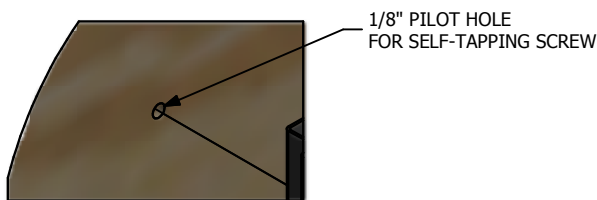

DETAIL A

STEP 2 - SECURE IN PLACE WASHER AND SPRING CLIP WITH SUPPLIED SELF-TAPPING SCREW.

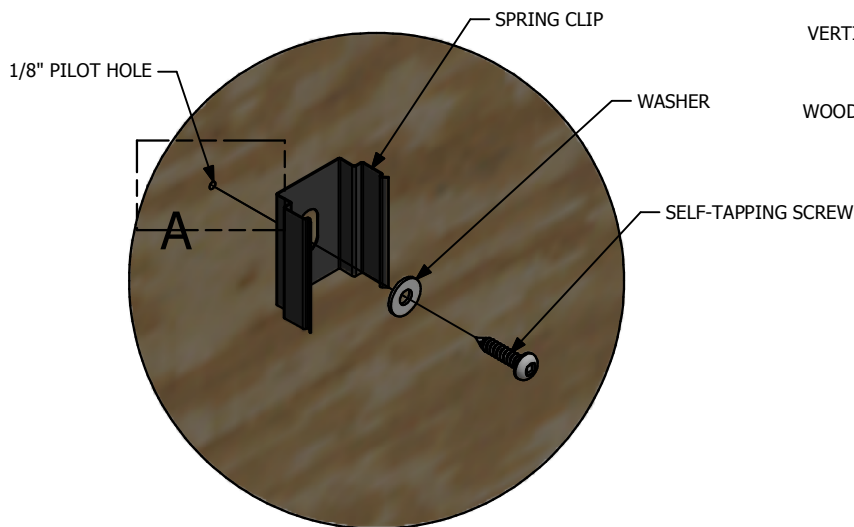

DETAIL B

STEP 3 - WITH THE CLIPS INSTALLED ONTO THE SURFACE PRESS THE VERTICAL STRIP INTO THE CLIPS.

