FLK - SERIES

ASSEMBLY INSTRUCTIONS FOR LIGHT MOUNTING KIT

BUL10212 REV. D

PAGE 1 OF 2

ASSEMBLY INSTRUCTIONS:

Remove plastic light cover.

Mount light housing using one of the following 3 methods: Step 1 or 2 or 3


- 1) Attach optional magnetic mounting strip (item 3) with magnetic strips facing up to light housing. Secure using 10-32 screws and kep nuts (items 4 & 5) thru mounting holes in light housing. Place on desired surface in enclosure.
- 2) Using mounting holes in light housing as template, mark drill location in top of enclosure. Drill .281/7mm dia. holes and secure using 1/4-20 hardware and sealing washers.
- 3) Mount light housing onto existing C channel in top of enclosures that are so equipped. Secure using 1/4-20 hardware and spring nuts.

Place Fluorescent tube (not provided) into light fixture and replace light cover. Connect electrical cord as per local electrical code


ASSEMBLY NOTES REMOTE DOOR SWITCH:

- A) Remote door switch bracket (item 2) can be mounted to underside flange of enclosure top. Mount in desired location of door opening: Drill .203 / 5mm dia. holes at 2.0" / 50.8mm centers mount slotted bracket using 10-32 screws and kep nuts (items 4 & 5)
- B) Attach snap in door switch and adjust switch and bracket to activate on I/S door surface. Tighten screws and nuts on slotted bracket.
- C) Connect power as per local electrical code. Note schematic for remote switch to fluorescent light kit.

LIGHT KIT AND REMOTE DOOR SWITCH

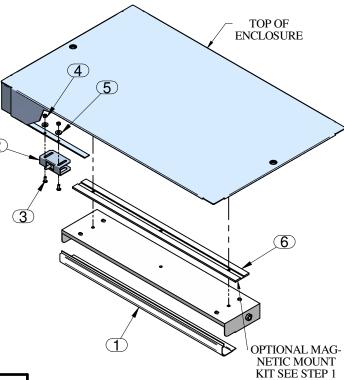


LIGHT KIT ASSEMBLY

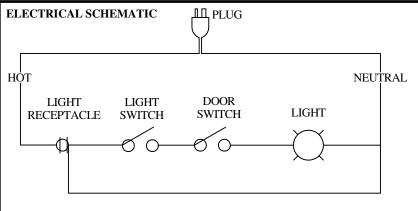

PARTS LIST						
ITEM No.		DESCRIPTION		QTY		
1	FLK	LIGHT KIT		1		
2	REM	OTE DOOR SWITCH *		1	* Supplied with FLKDS	
3	10-32	2 SCREW *		4*		
4	10-32	2 KEP NUT *		4*		
5	SEA	LING WASHER *		4*		
6	MAGNETIC MTG STIP			1		
7	1/4-20 SCREW			2		
8	1/4-20 SPRING NUT			2		
9	SLOTTED BRACKET *			1*		
TOOL BOX						

1/4 Slot Head Screw Driver Screw Driver End Wrench Punch 312"(7.9mm) bit Measure

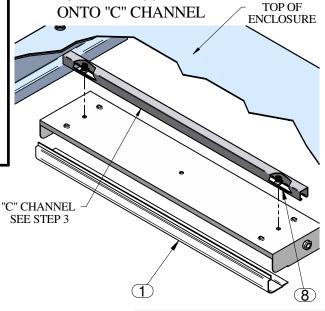



FLK - SERIES

ASSEMBLY INSTRUCTIONS FOR LIGHT MOUNTING KIT


BUL10212 REV. D


PAGE 2 OF 2

C2 AND C4 SERIES_ASSEMBLY NOTES FOR_REMOTE DOOR SWITCH:

- A) Mounting bracket (item 9) can be mounted to inside flange of enclosure top. Mount in desired location of door opening: Drill .203 / 5mm dia. holes at 1 3/4" / 45.5mm centers mount slotted bracket using 10-32 screws, flat washers and kep nuts (items 3, 4 & 5)
- B) Remote door switch bracket (item 2) can be mounted to slotted bracket using 10-32 screws, flat washers and kep nuts (items 3, 4 & 5)
- C) Attach snap in door switch (item 2A) and adjust switch and bracket to activate on I/S door surface. Tighten screws and nuts on slotted bracket.
- D) Connect power as per local electrical code. Note schematic for remote switch to fluorescent light kit on sheet 1.

LIGHT KIT AND REMOTE DOOR SWITCH

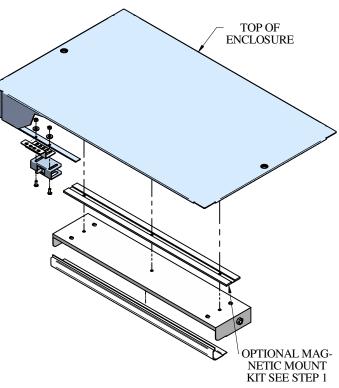

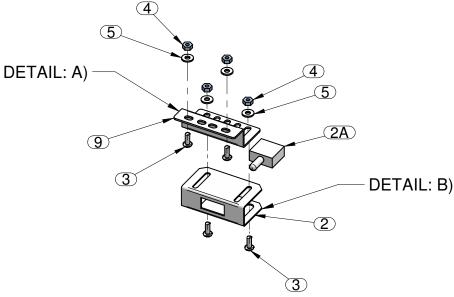

FLKDS
REMOTE DOOR SWITCH KIT
FOR C2 AND C4 SERIES RACKS

